

SERVICE REMINDERS

2024 CR-V e:HEV

	2WD	4WD
A Replace engine oil and oil filter	0.4	0.4
B Inspect front and rear brakes Inspect tie-rod ends, steering gearbox and boots Inspect suspension components Inspect driveshaft boots Inspect brake hoses and lines including ABS lines Inspect all fluid levels and condition of fluids Inspect exhaust system Inspect fuel lines and connections Inspect tyre condition Check expiry date for TRK (Temporary Repair Kit) bottle Test Drive (noise, stability, dashboard operation) Check lights alignment Inspect vehicle corrosion *1 Check parking brake adjust Inspect drive belt	0.6	0.6
2 Replace dust and pollen filter *2	0.2	0.2
3 Replace transmission fluid	0.4	0.4
4 Replace fuel filter *3	1.1	1.1
5 Replace engine coolant	0.9	0.9
6 Replace rear differential fluid	-	0.3
7 Replace brake fluid	0.4	0.4
8 Replace air cleaner element *4	0.2	0.2
9 Replace spark plugs	0.4	0.4

* 1 If item B appears before one year has passed, inspect for vehicle corrosion every year.

* 2 When you drive primarily in urban areas that have high concentrations of soot in the air, under dusty conditions, or when the air flow from the heating and cooling system/climate control system becomes weak, replace the filter every 30,000 km (18,500 miles) or every year.

* 3 It is recommended that you replace the fuel filter every 130,000km (81,000 miles) if the fuel you are using is suspected to be contaminated with dust, etc. because the filter can become clogged sooner.

* 4 If you drive in dusty conditions, replace every 30,000 km (18750 miles).