

SERVICE REMINDER DATA

Honda e

		Honda e
	Check front and rear brakes	0.6
	Inspect tie-rod ends, steering gearbox and boots	
	Inspect suspension components	
	Inspect driveshaft boots	
	Inspect brake hoses and lines including ABS/VSA lines	
В	Inspect all fluid levels and condition of fluids	
ь	Check expiration date for TRK (Temporary Repair Kit) bottle	
	Test drive (noise, stability, dashboard operation)	
	Check lights alignment	
	Inspect vehicle corrosion *1	
	Check parking brake adjustments	
	Inspect tyre condition	
2	Replace dust and pollen filter *2	0.2
3	Replace transmission fluid *3	0.4
7	Replace brake fluid	0.4



Under the following conditions, maintenance for certain items is required independent of the multi information display.

- *1 if item Bappears before one year has passed, inspect vehicle corrosion every year.
- *2 when you drive in primarily urban areas that have high concentrations of soot in the air, under dusty conditions, or when the air flowfrom the heating and cooling system/climate control system becomes weak, replace the filter every 20,000 km (12,500 miles) or every year.
- *3 driving in mountainous areas at very low/high speeds results in higher transmission temperatures. This required transmission fluid changes more frequently than recommended by the service reminder. If you regularly drive your vehicle under these conditions, have the transmission fluid changed every 50,000 km